


Connect a 6mm hose from the fitting (A) to the intake manifold as shown in the TIAL instructions (B). If you have a RIVA intake manifold upgrade kit or a RIVA/Wilson Billet manifold there is a fitting on the manifold to do this.

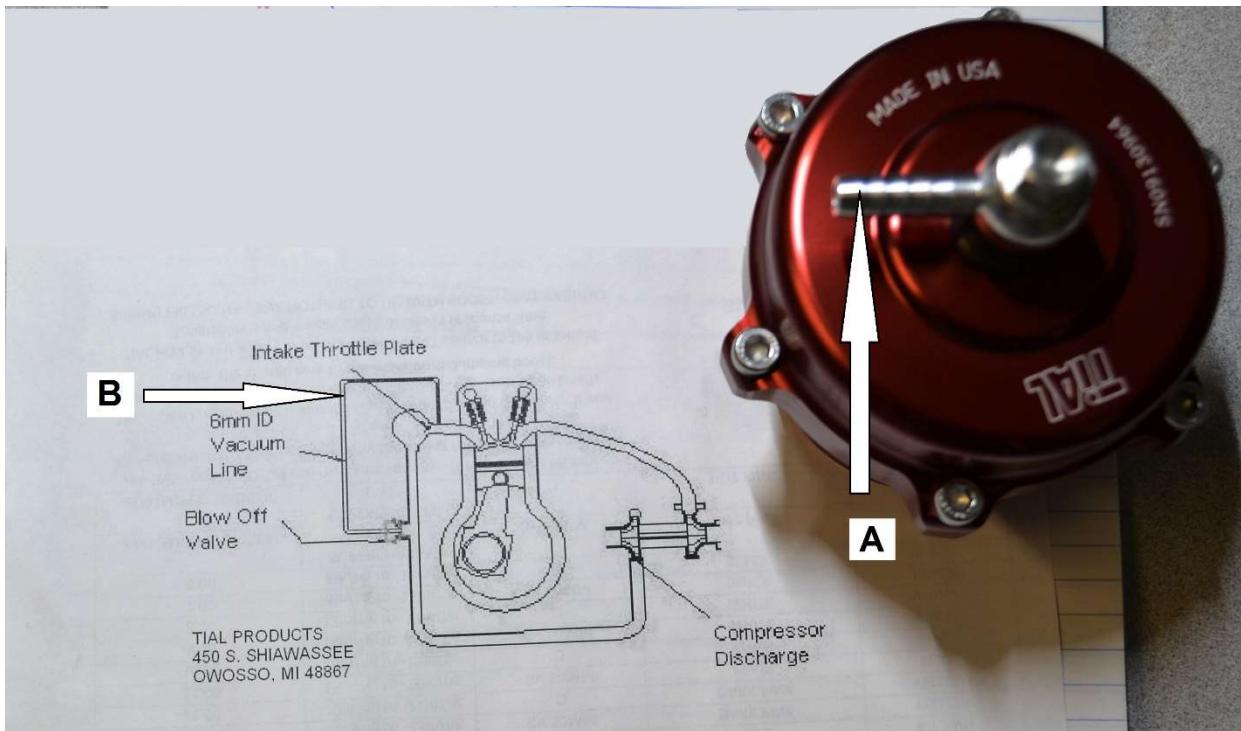

If you have an OEM Sea-Doo manifold without a RIVA intake manifold upgrade kit we recommend you drill out the fitting under the ECU to attach the hose

