



RIVA RACING
PERFORMANCE PRODUCTS & ACCESSORIES


3-Bar Map Sensor Kit **PART# - RY11740-MS-3-11**

APPLICATION(S): 2011 & Newer Yamaha SHO & SVHO

NOTE: ECU must be calibrated to work with 3-Bar MAP Sensor.

Remove plastic engine cover (2 bolts).

At rear of intake manifold disconnect electrical connector at map sensor.

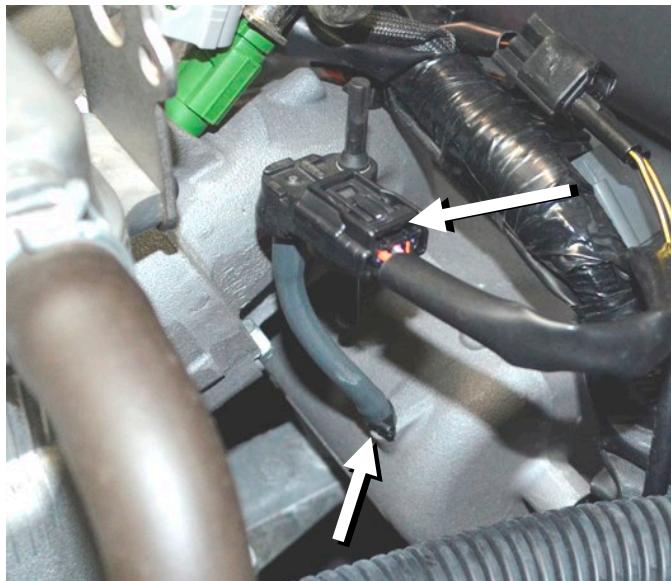


Under map sensor disconnect vacuum hose from intake manifold.

Pull up and back on stock map sensor (stretch rubber mounting grommet). Spray grommet with carburetor or brake cleaner. Pull firmly to remove grommet from intake manifold.

Attach vacuum hose on supplied 3-Bar MAP Sensor to fitting on intake manifold. Secure with supplied small zip tie.

Install 3-Bar MAP Sensor onto intake manifold with supplied hardware.

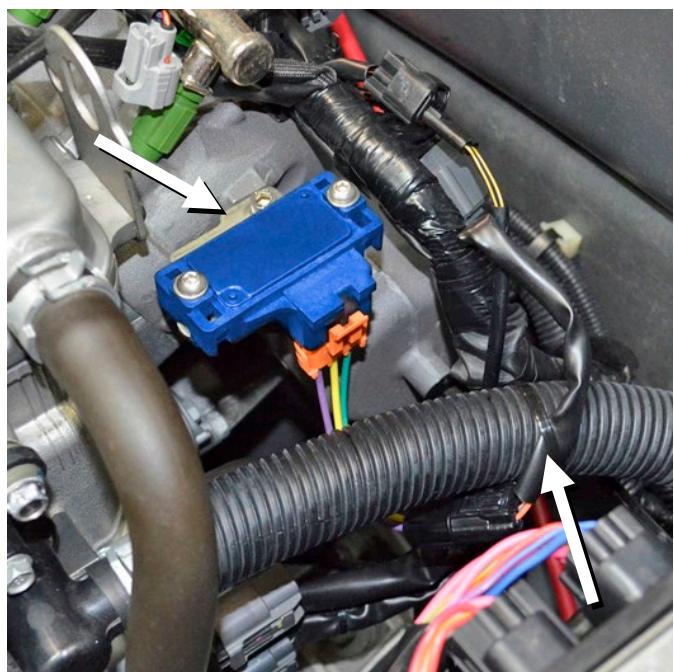

Connect open end of map sensor wire to wiring harness. Secure to cooling hose using supplied large zip tie.

Replace plastic engine cover.

Check bilge for tools, rags, etc. Run craft on a flush kit to check for proper operation.

Technical Support

For answers to questions regarding installation or trouble shooting RIVA Performance Products contact:
RIVA Technical Support directly at (954) 247-0705 or by e-mail at tech_support@rivaracing.com.

Due to the nature of this product no warranty coverage is offered.