

2012-2020 SEADOO RXPX AIR FILTER KITS

Part No. WR04038-RXPX

Suits Models:
• 2012-2019 SeaDoo RXPX

Parts Supplied:

- Air Filter Adaptor
- 4" Air Filter
- 1" Breather Air Filter
- 1" Hose Clamp
- 3 x 4" Hose Clamps
- WR04034-8 Mounting Bracket
- WR04034-1 Silicon Hosing
- M6 x 12mm Cap Head Bolts
- M6 Washer

Tools Required:

- T27 Torx Bit
- Flat Blade Screwdriver
- 5mm Hex Key
- Phillips Head Screwdriver
- M10 Socket/Spanner

IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION

INSTALLATION INSTRUCTIONS:

1. Make sure ski is secure and on a flat surface. Remove lanyard and disconnect battery.

2. Pull the seat housing off the ski.


3. Undo and remove the labelled bolts⁽¹⁻²⁾ with a torx bit.



4. Pull front of panel away from the ski as pictured below and remove.




5. Undo clips⁽³⁻⁸⁾ and bolts⁽⁹⁻¹¹⁾ shown below.

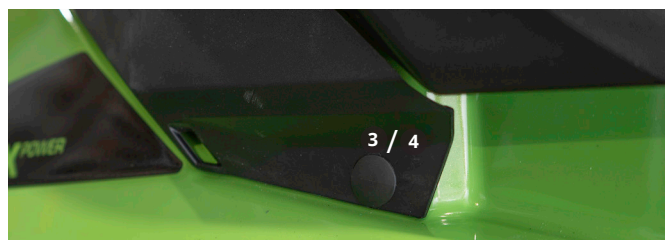


- 6.** Unclip and disconnect the cooling fluid tank from the ski.




- 7.** Undo bolts⁽¹²⁻¹⁷⁾ pictured below and remove plastic.

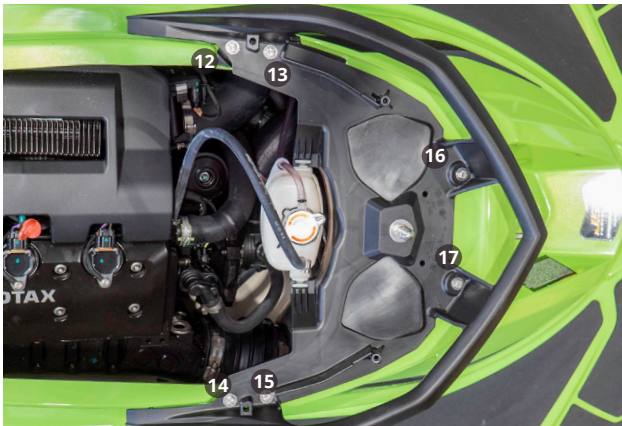


- 8.** Undo and retain hose clamps pictured below ⁽¹⁸⁻²⁰⁾

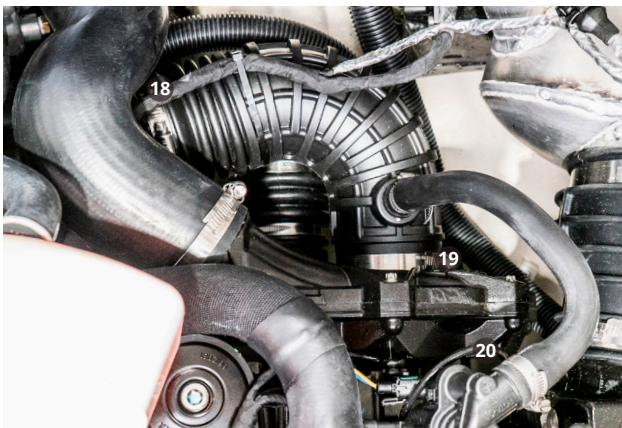


- 9.** Remove Intake Hose and breather hose.

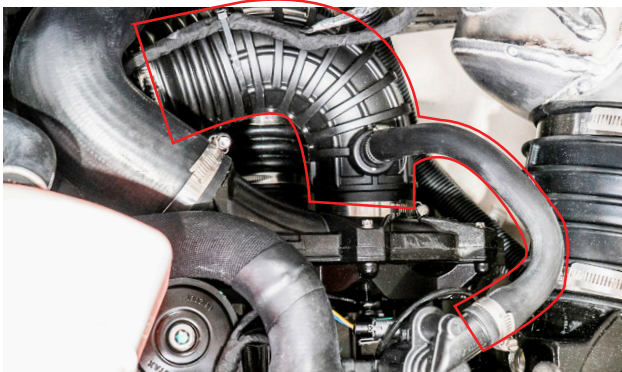

- 10.** Fit the breather filter as pictured using the provided hose clamp.

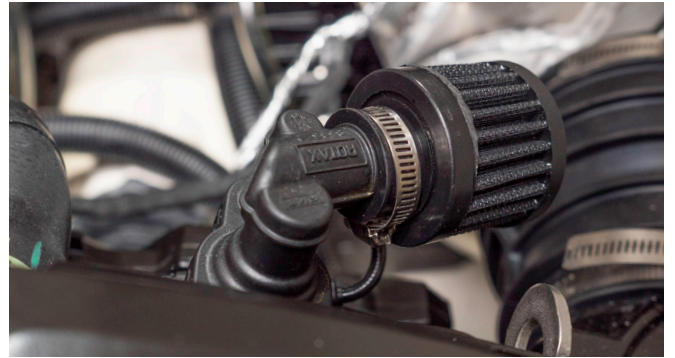

- 11.** Fit the supplied silicon hose to the supercharger using the OEM hose clamp.

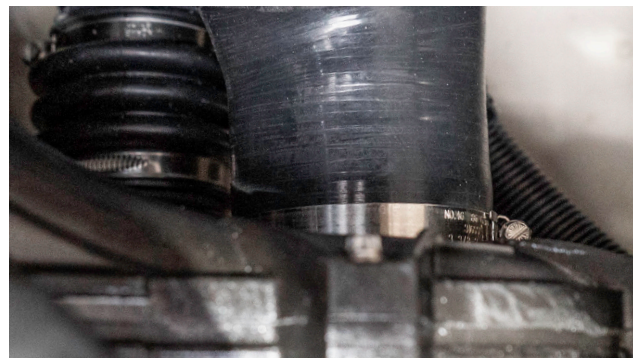

- 12.** Assemble the pod and air filter adaptor with bracket as pictured below. With the pod facing forward, attach the bracket to the left most position on the air filter adaptor.



- 13.** Replace the plastic top piece and attach the bracket to the ski using the OEM bolts.



- 14.** Connect the adaptor to the silicon hosing and use the hose clamp supplied to tighten. Then reclip in the coolant tank.



- 15.** Ensure all connections are tight and secure before reinstalling all panels and seat.