

Parts Supplied:


- Catch Can Assembly
- Breather Filter
- Seadoo Catch Can Bracket
- Catch Can Silicone Hose
- 3 x 18-32mm Hose Clamps
- 2 x M6 x 12mm Bolts

Tools Required:

- T27 Torx Bit
- Flat Blade Screwdriver
- 5mm Hex Key
- Phillips Head Screwdriver
- M10 Socket/Spanner

IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION**INSTALLATION INSTRUCTIONS:**

1. Make sure ski is secure and on a flat surface. Remove lanyard and disconnect battery.
2. Pull the rear plastic and seat housing off the ski.
3. Undo and remove the labelled bolts⁽¹⁻¹³⁾ with a torx bit.

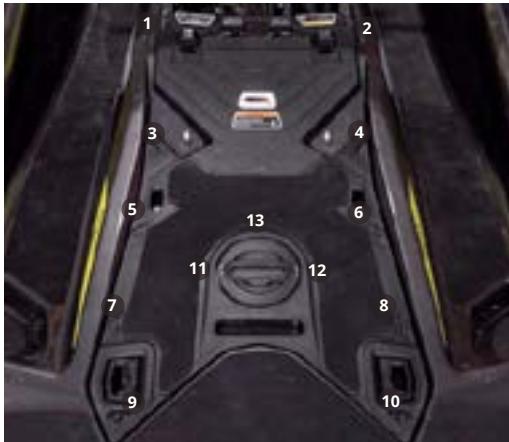


4. Worx recommends installation with a Worx Air Filter, if using a Worx Air Filter, skip to step 6. If not using a Worx Air Filter, remove stock breather hose and hose clamps.



5. Plug the OEM breather hose port on the OEM Air Filter Hose with a block off (not supplied).
6. If using a Worx Filter, remove breather filter and hose clamp.



7. Attach bracket using OEM⁽¹⁴⁻¹⁵⁾ bolts in position shown below.

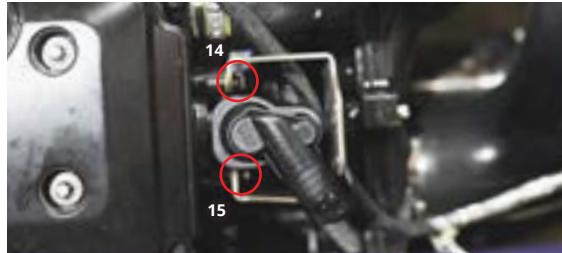

7. Assemble Catch Can, Breather and Hoses as shown below.



- 8.** Secure the catch can to the bracket using the supplied M6 x 12mm bolts
- 9.** Secure the catch can hose to the breather port using supplied hose clamp.



- 10.** Ensure all connections are tight and secure before reinstalling reconnecting battery, reinstalling top deck and testing.