



WORX RACING INTAKE GRATE

PART # - WR0703


MODELS: Pump Plug Kit to suit WORX Intake Grate WR237

INSTALLATION INSTRUCTIONS

IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION

Parts Supplied: 1 x WORX WR0703 Intake Grate

- 1- Fit WORX pump plug kit before installing intake grate into ski.
- 2- Make sure to remove any debris in intake grate cavities. Trim any excess on plug kit before fitting.
- 3- Fit pieces into allocated holes and tap in tight with hammer.
- 4- Trim flush any excess or overhanging pieces with sharp knife.
- 5- Install grate as per instructions with Marine Silicone sealant.

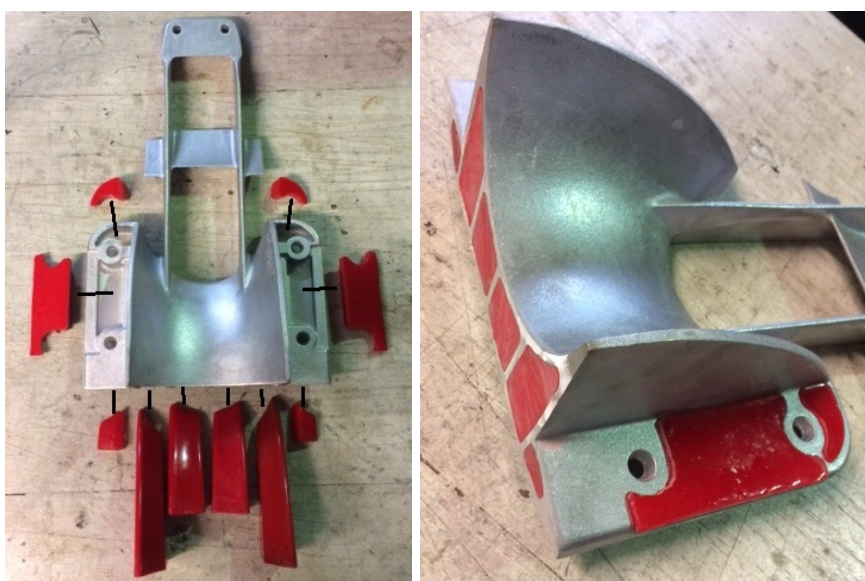

Thank you for purchasing **WORX Racing Components** products. We firmly believe that **WORX Racing Components** products are among the finest watercraft parts available. A great deal of time and effort has gone into the design and development of this product to ensure that it will perform to the highest standard and that installation is a relatively straight forward and simple procedure. If you have any questions or comments on the performance and/or installation of our products please contact us at the numbers listed on page one or through your local **WORX** dealer.