



Bar Mount System ***PART# - RK20090-U-8.75***

We strongly recommend the use of a service manual to familiarize yourself with the various components and procedures involved with this installation. Please note that some of the original hardware removed in the disassembly process will be used in the installation process. These instructions have been written in step-by-step format and refer to illustrations. We suggest reading through the instructions entirely before performing installation. Please follow these step-by-step instructions and illustrations carefully.

APPLICATION(S): Kawasaki Ultra 300/260/250

- INSTALLATION INSTRUCTIONS -

Remove handlebar pad cover (4 screws).



Remove handlebar pad foam.



Remove handlebar pad bracket (2 bolts).



Remove throttle cable from throttle trigger.

Remove throttle trigger (3 bolts) and start/stop switch (3 screws) assemblies.




Remove handlebars (4 bolts).




Remove steering column cover.



Remove steering column (4 bolts).

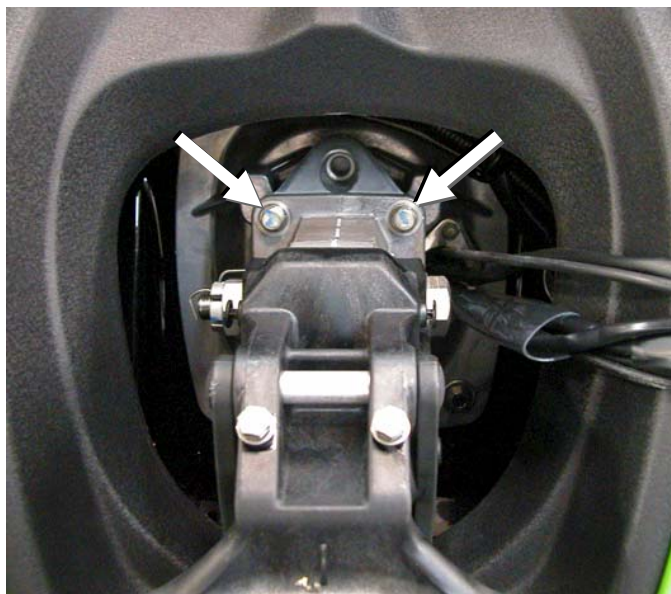

Dry fit supplied Bar Mount System to ensure mounting plate clears cotter pin securing stock steering shaft nut.

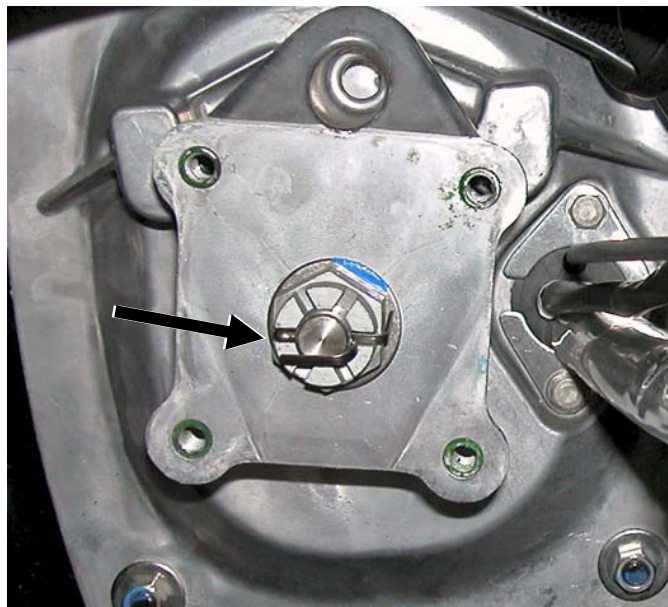

NOTE: It may be necessary to compress the prong folded over top of steering shaft.

Install supplied Bar Mount System. Securing using stock hardware. **NOTE:** Apply red Loctite to threads. **Torque bolts to 12 ft•lb / 18 N•m.**

Relocate temperature sensor. **TIP:** Use stock washer clamp at top right of steering holder to secure temperature sensor.



HANDLEBAR INSTALLATION:

The RIVA Pro-Series Steering Stem accepts both standard 7/8" bars and 1-1/8" bars. Billet spacers are supplied to allow use of 7/8" bars. Note that billet spacers have a flange collar on one side. This faces out. Also note that one spacer on each side has a flat surface machined into the flange collar. Place in bottom of handlebar clamp.



NOTE: Thoroughly clean bars, billet spacers and handlebar clamping surfaces with a non-residual cleaner. Apply red Loctite to handlebar clamp bolts. Torque bolts evenly to 14 ft•lb / 20 N•m.

Install aftermarket handlebars, controls and hand grips.

THROTTLE TIGGER NOTES:

Stock throttle trigger & cruise control can be removed. Follow cruise control wires to connector. After disconnecting apply dielectric grease to connector and cover with small plastic bag.

Check bilge for tools, rags, etc.

ADJUSTMENT NOTES:

Handlebar tilt is adjustable. When final position is achieved remove all bolts loosened one at a time, apply blue Loctite and re-torque. Periodically check all bolts to ensure they are properly torqued. If any are loose remove, reapply Loctite and re-torque.

***Remember, the water belongs to everyone.
Please ride responsibly and respect the environment!***

Technical Support

For answers to questions regarding installation or trouble shooting RIVA Performance Products contact: RIVA Technical Support directly at (954) 247-0705 or by e-mail at tech_support@rivamotorsports.com.

Limited Warranty

RIVA Bar Mount Systems carry a 1-year limited warranty to the original purchaser. They are warranted to be free of defects in materials and workmanship under normal use and service. Customer modified components will be void of warranty. This warranty is limited to defects in the primary components only. Finish and/or wear marks in or on primary components are not covered under this warranty.

RIVA Racing's liability is expressly limited to the repair or replacement of the components contained within or associated with this kit. RIVA Racing agrees to repair or at RIVA's option, replace any defective unit without charge, if product is returned to RIVA Racing freight prepaid within the warranty period. Any equipment returned which, in RIVA's opinion, has been subjected to misuse, abuse, overheating or accident shall not be covered by this warranty.

RIVA Racing shall have no liability for special, incidental or consequential damages or injury to persons or property from any cause arising from the sale, installation or use of this product.

No other warranty, express or implied, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose, applies. Various states do not allow for the limitation of incidental or consequential damages and therefore the above exclusion or limitation may not apply to you.

Warranty does not include the expenses related to freight or transportation of parts or compensation for any inconvenience or loss of use while being repaired. A copy of the original invoice and a Return Authorization Number (RA#) must accompany all warranty claims.

Warranted replacement parts will be returned freight collect.