



RIVA RACING
PERFORMANCE PRODUCTS & ACCESSORIES

Sea-Doo Audio Upgrade Kit

RS11120-AUK



Applications:

2018 & Newer Sea-Doo RXT/GTX/Wake Pro/Fish Pro/Explorer Pro*

2021 & Newer Sea-Doo RXP*

2021 & Newer Sea-Doo GTI/GTR & Wake*

*=Must be equipped with factory Sea-Doo Bluetooth Audio System

GET THE LATEST UPDATES!

Prior to installation, go to the RIVA Racing online Instruction Library to download the latest version of these instructions:

<https://rivaracing.com/instructions>

Approximate Installation Time:

30 Min.

Recommended Specialty Tools:

T-20 Torx Bit

Part

[RS35187](#)

Required Materials:

Dielectric Grease (Terminal Grease)

Blue Loctite

Part

N/A

N/A



RIVA RACING
PERFORMANCE PRODUCTS & ACCESSORIES

Sea-Doo Audio Upgrade Kit

RS11120-AUK

COMPONENT LIST

<u>ITEM</u>	<u>DESCRIPTION</u>	<u>RIVA PART #</u>	<u>QTY</u>	<u>NOTES</u>
A	Zero 6 Speaker Grill	RS11120-AUK	2	
B	Zero 6 Speaker		2	
C	Speaker Adapter Ring		2	
D	Wire Harness Adapter		2	
E	Phillips Screw		8	

Your kit was inspected and verified before being carefully packaged by our staff. Please check package contents before beginning assembly. If you have a question about missing or damaged items please contact RIVA Technical Support directly at (954) 247-0705 or by e-mail at tech_support@rivaracing.com.

We strongly recommend the use of a service manual to familiarize yourself with the various components and procedures involved with this installation. Please note that some of the original hardware removed in the disassembly process will be used in the installation process. These instructions have been written in step-by-step format and refer to illustrations. Read through instructions entirely before performing installation. Please follow these step-by-step instructions and illustrations carefully.

***** ALLOW ENGINE TO COOL COMPLETELY BEFORE PERFORMING INSTALLATION *****

***** NO SMOKING *** NO SMOKING *** NO SMOKING *****

Caution: Whenever using electric or battery operated tools inside the hull be sure it is well ventilated and no fumes are present. Failure to do so could result in a fire, or explosion and serious personal injury or death.

This kit is not intended for use on pollution controlled vehicles. Installation on pollution controlled vehicles may constitute a violation of state or local statutes.

- INSTALLATION INSTRUCTIONS -

Remove D.E.S.S. lanyard and allow electrical system to power down completely.

Insert a small allen wrench or similar tool into small hole at back of each factory speaker grill. Gently press inward and rotate speaker grill counter-clockwise to unlock. Lift to remove.




Using a T-20 Torx bit, remove Torx screws (6) securing each factory speaker to its speaker pod .



Carefully remove each speaker and disconnect electrical connector.



Connect wire harness adapters to factory speaker wires in each speaker pod, **NOTE: Apply dielectric grease onto end of factory connectors. Ensure connectors 'lock' together.**

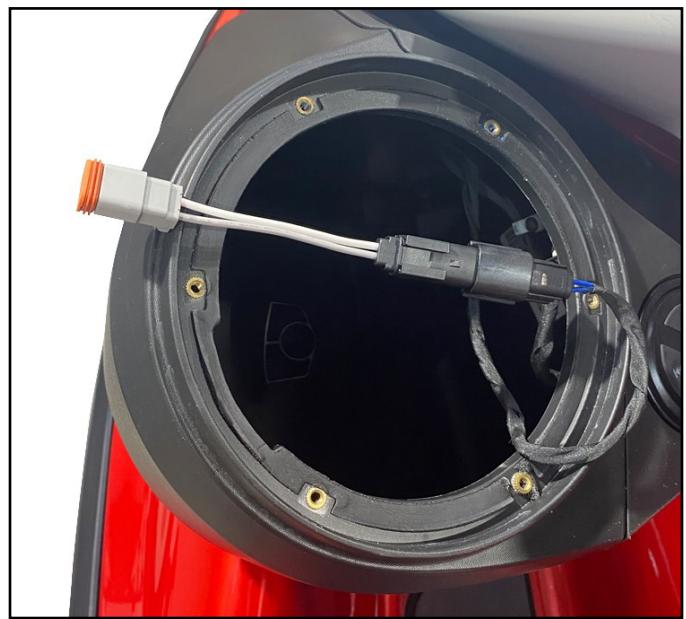

- INSTALLATION INSTRUCTIONS -

Place supplied adapter rings onto corresponding speaker pod. **NOTE: Side of adapter ring marked 'RH-TOP' fits right speaker pod. Side of adapter ring marked 'LH-TOP' fits left speaker pod.**



Insert supplied speakers into factory speaker pods. Secure speakers to adapter rings using supplied Phillips head screws (4 per speaker). **NOTE: Apply blue Loctite to screws. Do not overtighten.**




Secure adapter rings to speaker pods using factory Torx screws (6 per adapter ring). **NOTE: Apply blue Loctite to screws. Do not overtighten.**

Connect gray wire harness adapter connectors to supplied speakers. **NOTE: Apply dielectric grease onto end of gray wire harness adapter connectors. Ensure connectors 'lock' to speakers. Apply dielectric grease to blade terminals on speakers.**



Identify locking tabs on inner edge of supplied speaker grills and outer edge of supplied speakers (6 each).

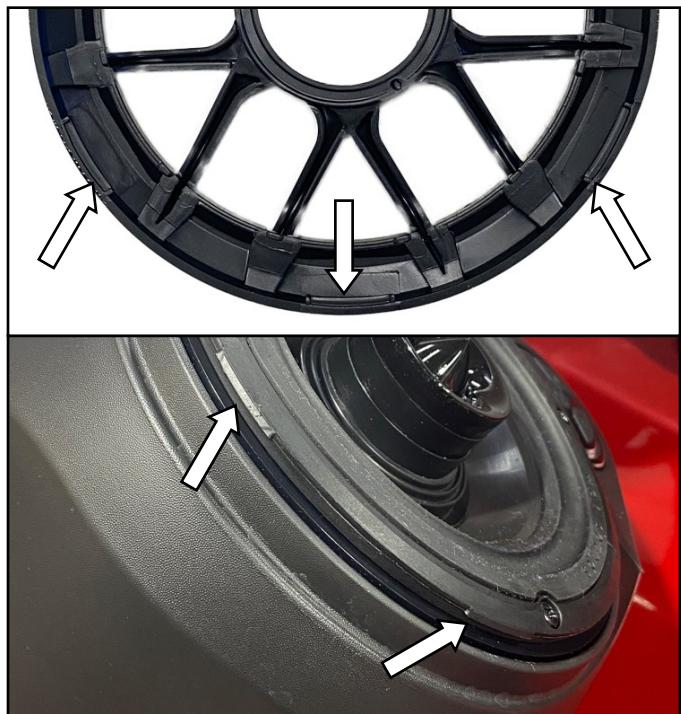

- INSTALLATION INSTRUCTIONS -

Centering locking tabs on speaker grill between locking tabs on speakers, install speaker grills onto speakers evenly. Rotate speaker grills approximately 30-degrees to lock in place.



Installation is now complete.

BEFORE YOU LISTEN

On your mobile device, go into the sound settings for each App that you use and do the following where applicable:

- Turn off **any** EQ settings
- Set cellular streaming to highest quality
- Set audio output to highest quality
- Turn off "normalization" in your audio menu

Connect D.E.S.S. lanyard, energize electrical system and **crank it up!**

Remember, the water belongs to everyone.

Please ride responsibly and respect the environment!

Technical Support

For answers to questions regarding installation or trouble shooting RIVA Performance Products contact:

RIVA Technical Support directly at (954) 247-0705 or by e-mail at tech_support@rivaracing.com.

Limited Warranty

RIVA Sea-Doo Audio Upgrade Kits carry a 2-year limited warranty to the original purchaser. They are warranted to be free of defects in materials and workmanship under normal use and service. Customer modified components will be void of warranty. This warranty is limited to defects in the primary components only. Finish and/or wear marks in or on primary components are not covered under this warranty.

RIVA Racing's liability is expressly limited to the repair or replacement of the components contained within or associated with this kit. RIVA Racing agrees to repair or at RIVA's option, replace any defective unit without charge, if product is returned to RIVA Racing freight prepaid within the warranty period. Any equipment returned which, in RIVA's opinion, has been subjected to misuse, abuse, overheating or accident shall not be covered by this warranty.

RIVA Racing shall have no liability for special, incidental or consequential damages or injury to persons or property from any cause arising from the sale, installation or use of this product.

No other warranty, express or implied, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose, applies. Various states do not allow for the limitation of incidental or consequential damages and therefore the above exclusion or limitation may not apply to you.

Warranty does not include the expenses related to freight or transportation of parts or compensation for any inconvenience or loss of use while being repaired. A copy of the original invoice and a Return Authorization Number (RA#) must accompany all warranty claims.

Warranted replacement parts will be returned freight collect.